






Perforated Metal Square Picnic Table


SKU CD-46SPT-P


Table=A 	Seat=B 	Right Leg =C 	Left Leg =D 	
1pc	4pcs			
 Dia. 5/16"x L. 1-3/16"Hex Cap Screw and 5/16" Hex Nut Twenty-eight sets				
 Bracket x 4  Screw x 8 Dia.1/4"xL.1-1/4"  Drill Bit x 1 Dia.1/5"xL.3-1/8"		4pcs	4pcs	X-Link 1pc

Perforated Metal

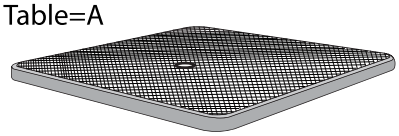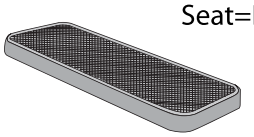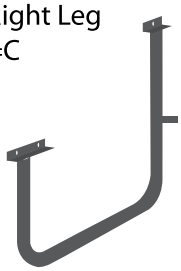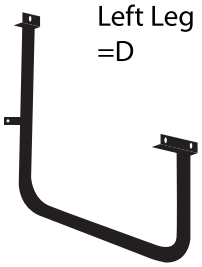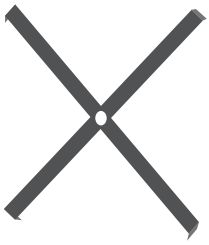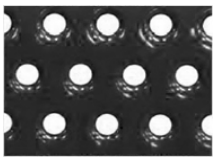

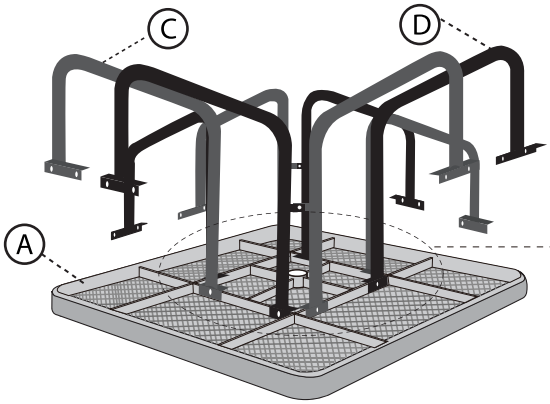


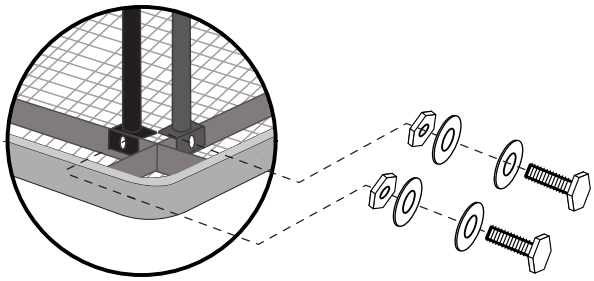


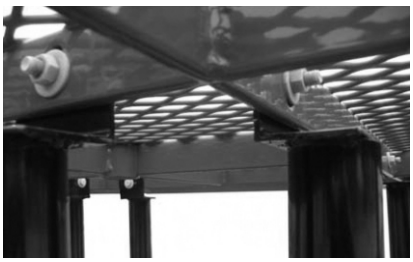

Step 1

Assembly of the Legs and desktop

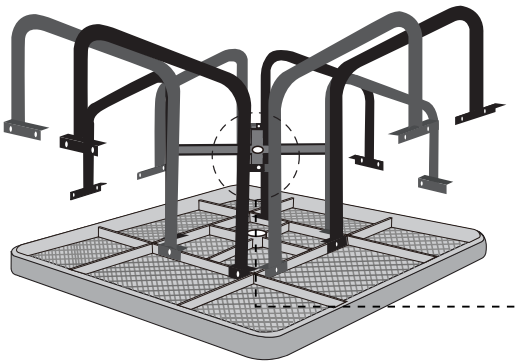

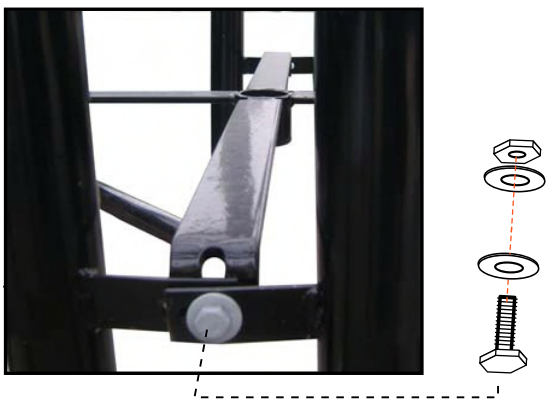


Step 2

Assembly of the X-Link onto the 4 Legs





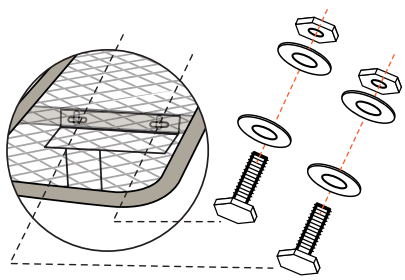

Step 3

Assembly of the Legs and Seats

Mounting Hardware

Concrete, block, or stone installation

1. Using the provided drill bit, drill a 2-1/2" deep hole.
2. Blow dust out of the hole.
3. Place the bracket over the bench or table tubing.
4. Drive each screw flush through the bracket and into the drilled hole.
5. Repeat for the remaining screws.

