



Perforated Metal Picnic Bench with Backrest

SKU CD-72B-P


Backrest and Seat = A	Right Leg =B	Left Leg =C	
			
2pcs			
 Dia. 5/16"x L. 1 3/16"Hex Cap Screw and 5/16" Hex Nut eleven sets			
 Bracket x 2  Screw x 4 Dia.1/4"xL.1-1/4"  Drill Bit x 1 Dia.1/5"xL.3-1/8"	1pc	1pc	V-Link 2pcs

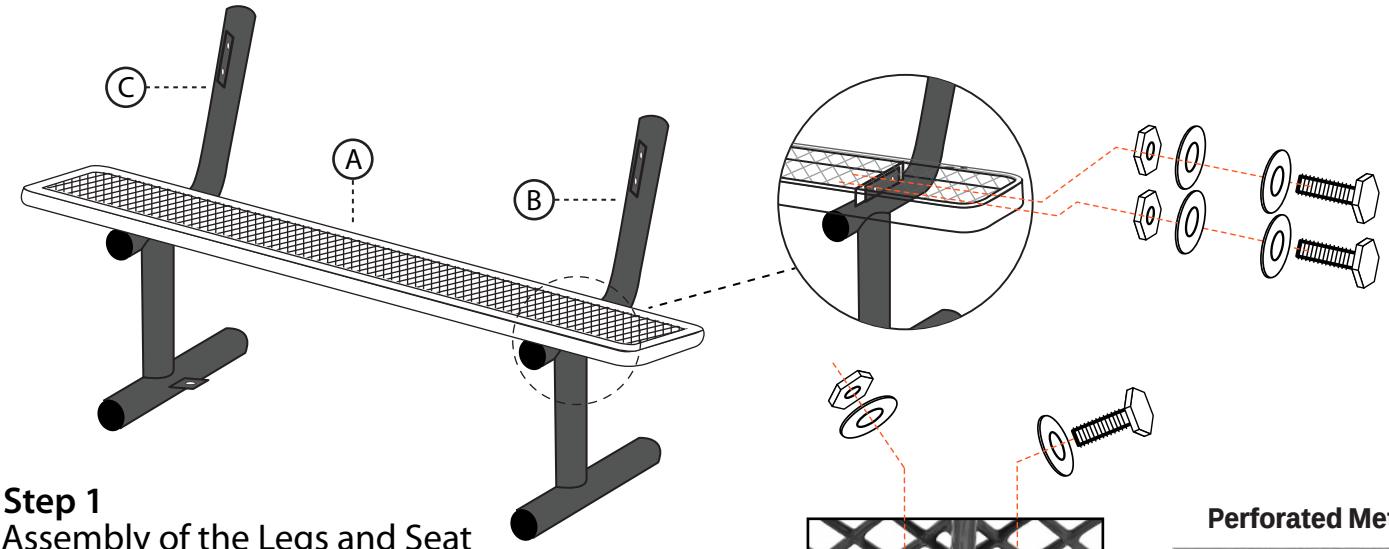


Step 1
Assembly of the Legs and Seat

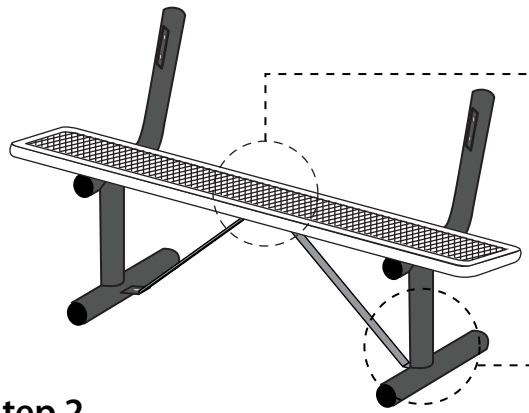


Step 2
Assembly of the V-Link onto the 2 legs

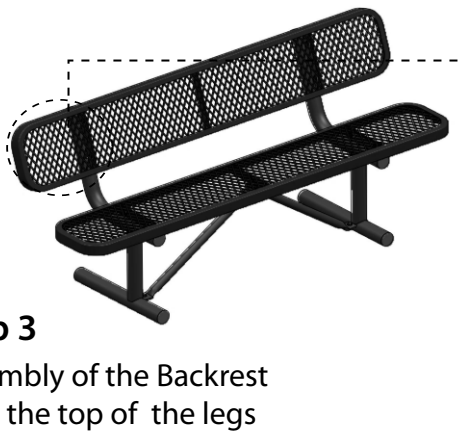

Step 3
Assembly of the Backrest onto the top of the legs

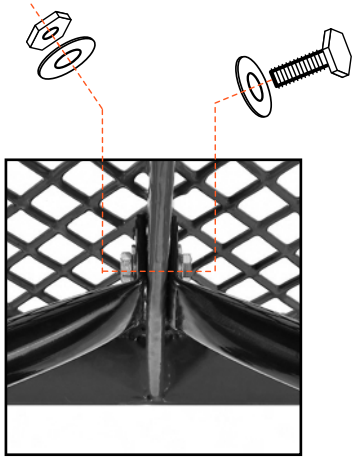


Perforated Metal

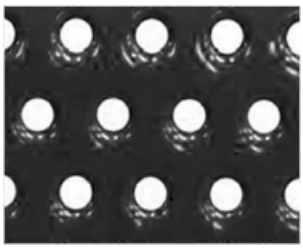







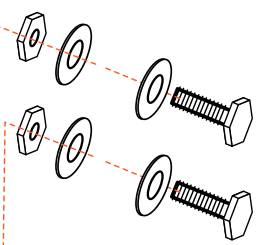

Mounting Hardware

Concrete, block, or stone installation

1. Using the provided drill bit, drill a 2-1/2" deep hole.
2. Blow dust out of the hole.
3. Place the bracket over the bench or table tubing.
4. Drive each screw flush through the bracket and into the drilled hole.
5. Repeat for the remaining screws.

