



Perforated Metal Rectangular Picnic Table

SKU CD-72PT-P

Table=A 	Seat=B 	Leg =C 	
1pc	2pcs		
 Dia. 5/16"x L. 1 3/16"Hex Cap Screw and 5/16" Hex Nut fifteen sets			
 Bracket x 4  Screw x 8 Dia.1/4"xL.1-1/4"  Drill Bit x 1 Dia.1/5"xL.3-1/8"		2pcs	V-Link 2pcs


Perforated Metal

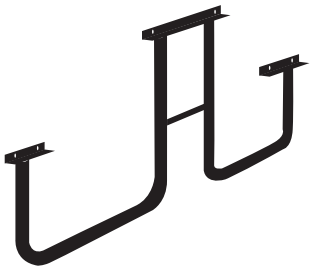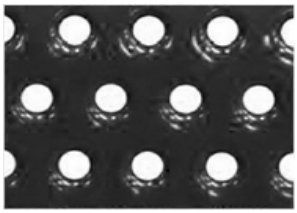

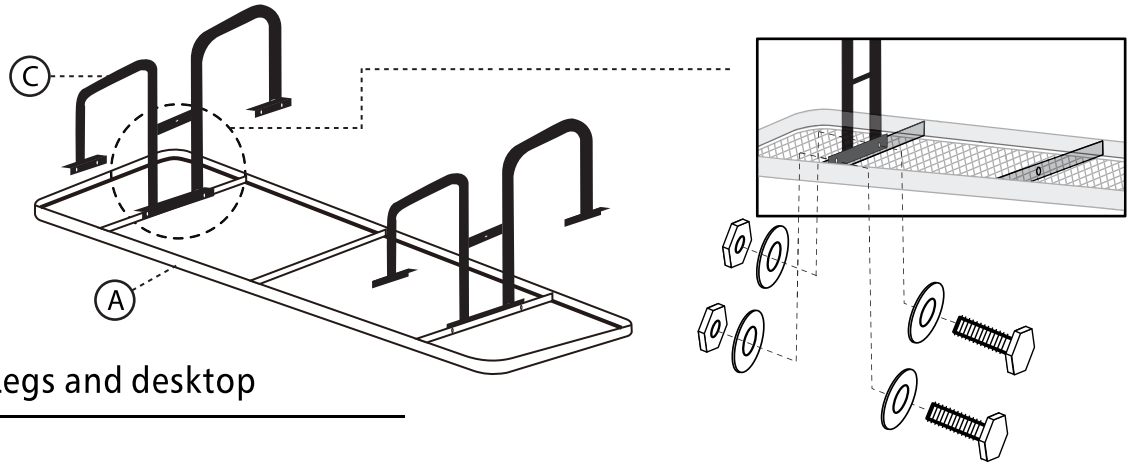


Step 1

Assembly of the Legs and desktop

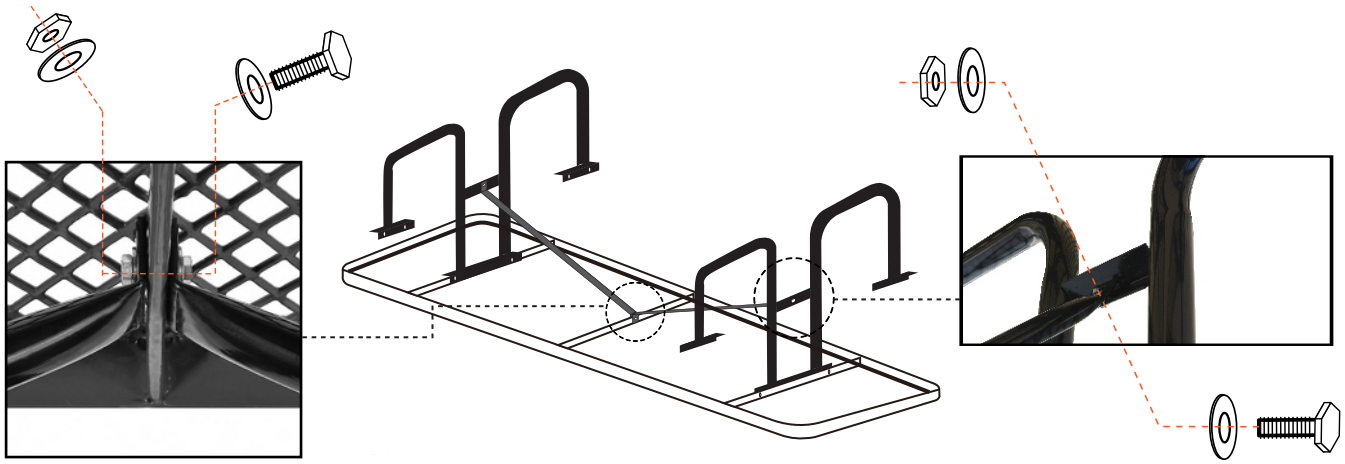

Step 2

Assembly of the V-Link onto the 2 Legs and desktop

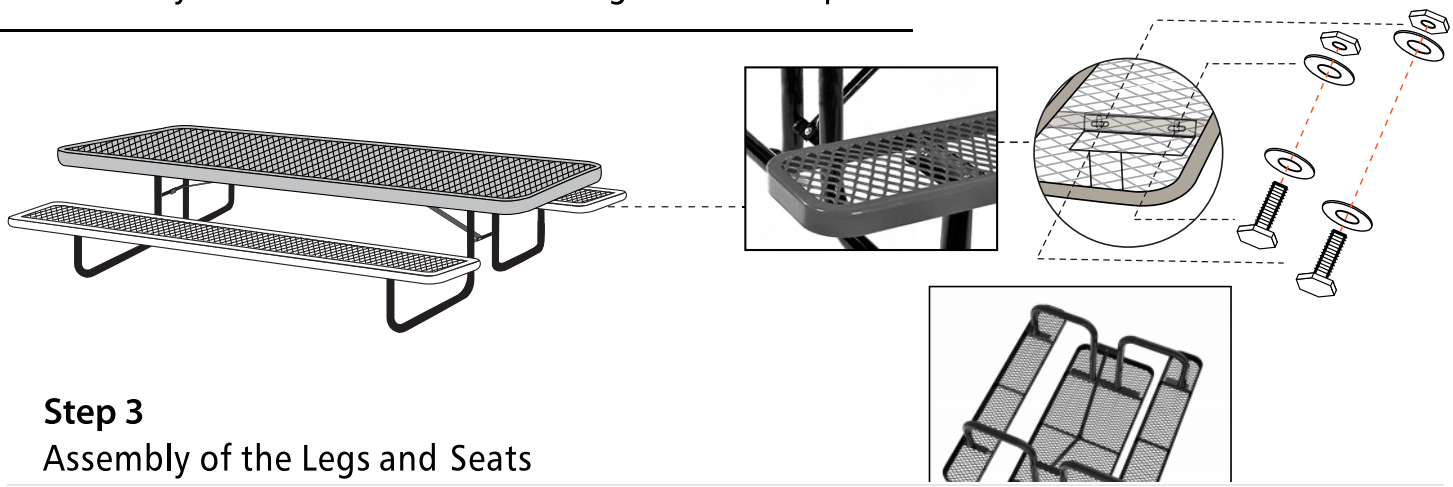

Step 3

Assembly of the Legs and Seats

Mounting Hardware

Concrete, block, or stone installation

1. Using the provided drill bit, drill a 2-1/2" deep hole.
2. Blow dust out of the hole.
3. Place the bracket over the bench or table tubing.
4. Drive each screw flush through the bracket and into the drilled hole.
5. Repeat for the remaining screws.

