


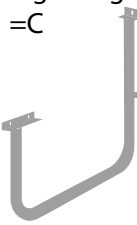
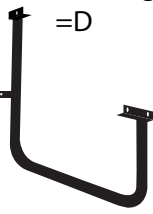
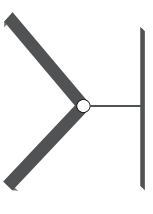
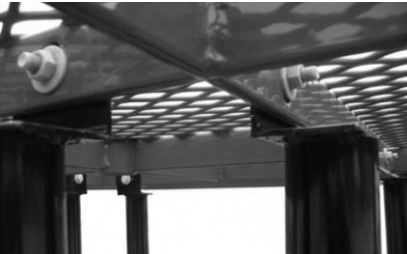
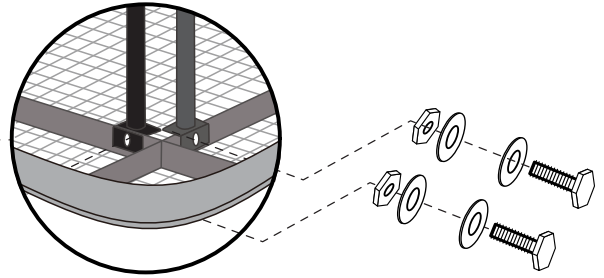
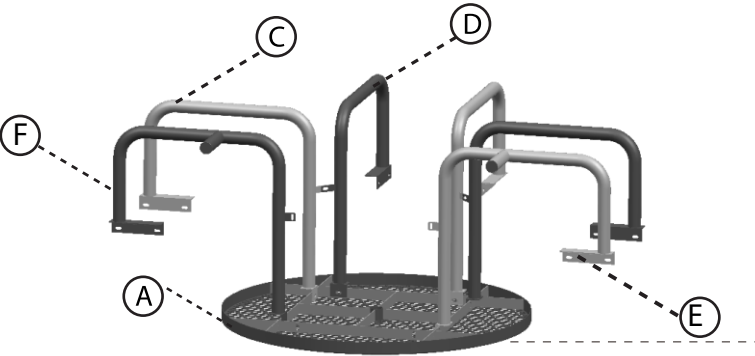




Table=A 	Seat=B 	Right Leg =C 	Left Leg =D 	ADA Leg =E 	ADA Leg =F 	
1pc	3pcs					
 Bracket x 3		Dia. 5/16"x L 1 3/16" Hex Cap Screw and 5/16" Hex Nut Twenty-two sets				
 Screw x 6 Dia. 1/4"x L 1-1/4"		 Drill Bit x 1 Dia. 1/5"x L 3-1/8"		2pcs	2pc	1pc
				1pc	1pc	Link 1pc

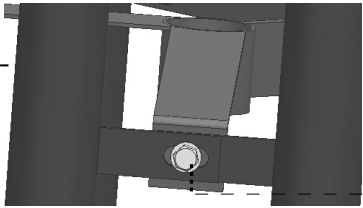

Step 1
Assembly of the Legs and desktop

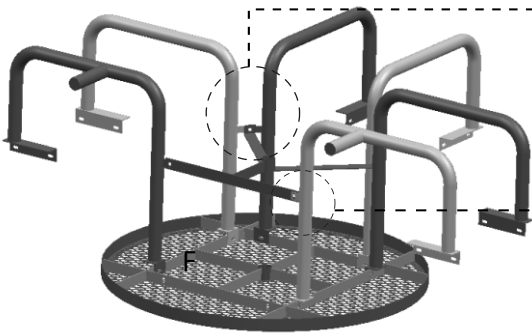

Step 2
Assembly of the Link onto the 6 legs

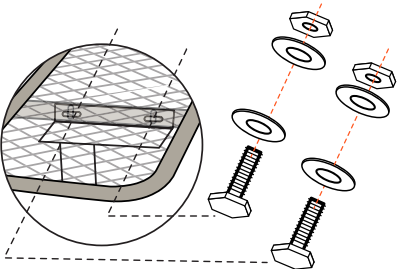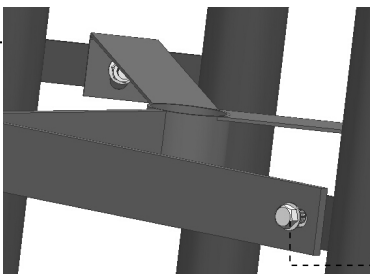

Step 3
Assembly of the Legs and Seats



Mounting Hardware Instruction

Step 4

1. Using provided drill bit, drill hole into the concrete, block or stone to a depth of 2 -1/2".
2. Blow out the dust in the hole.
3. Place bracket over tubing.
4. Secure screw flush with bracket into drilled hole.
5. Repeat on remaining screws.

