


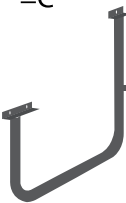
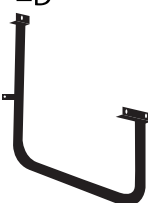
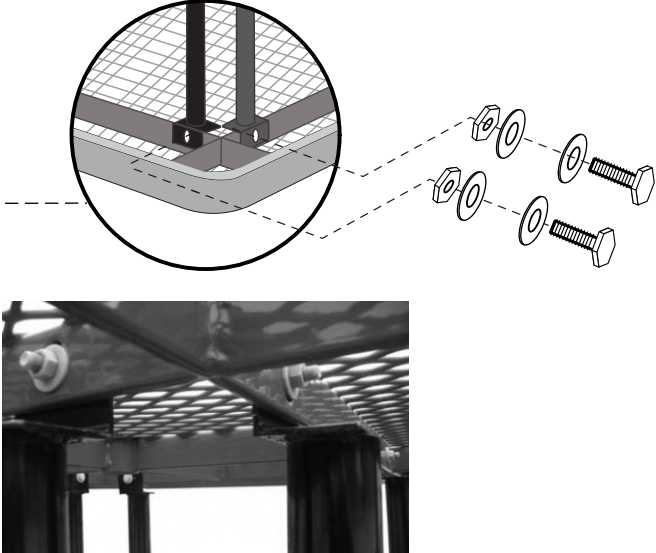
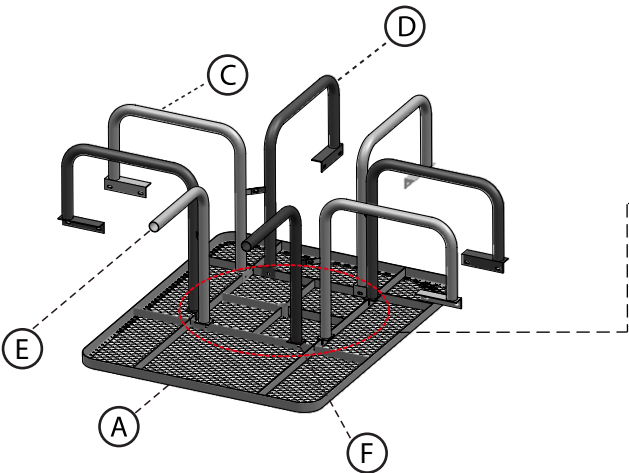



Table=A 	Seat=B 	Right Leg =C 	Left Leg =D 	ADA Leg =E 	ADA Leg =F 	
1PC	3PCS					
 Dia. 5/16"x L. 1-3/16"Hex Cap Screw and 5/16" Hex Nut Twenty-four sets						
 Bracket x 4	 Screw x 8 Dia. 1/4"xL. 1-1/4"	 Drill Bit x 1 Dia. 1/5"xL. 3-1/8"	3PCS	3PCS	1PC	1PC
						X -Link 1pc

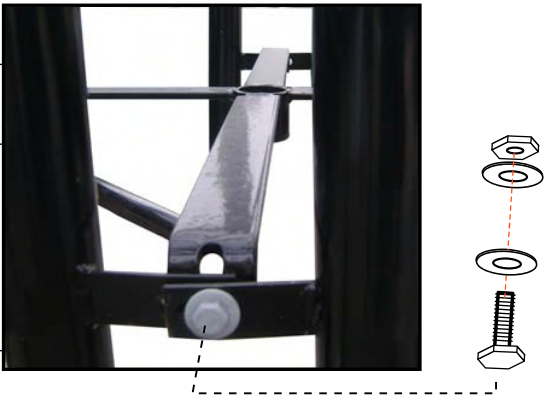

Step 1
Assembly of the Legs and desktop

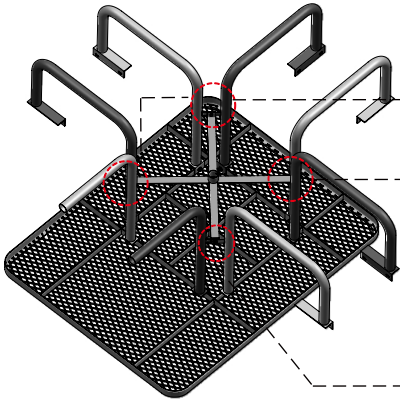

Step 2
Assembly of the X-Link onto the 4 Legs

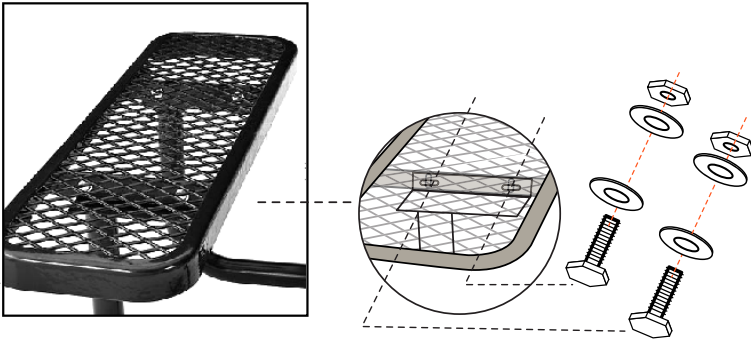

Step 3
Assembly of the Legs and Seats

Mounting Hardware Instruction

Step 4

1. Using provided drill bit, drill hole into the concrete, block or stone to a depth of 2 -1/2".
2. Blow out the dust in the hole.
3. Place bracket over tubing
4. Secure screw flush with bracket into drilled hole.
5. Repeat on remaining screws.

